

Wireless to Wireless





MikroTik User Meeting

Amsterdam, The Netherlands, April 2019 By: Payam Poursaied





Important notes:

- > Ask if it is not clear
- > Exit doors!
- > Let's be casual!
- > Eliminations
- > Legal notice: Always check the regulations!





Who I am?

- > Payam (like "Pa"[L] +"yum")
 - payam@MoLuke.net
- Background in Computer Engineering and Industrial engineering
- > 17+ years experience in an ISP
- > Now, Based in Vancouver (Canada)
- > MoLuke Inc.
 - System Integration
 - Telecom Solutions
 - Network Hardware





Session Objective

- > Connect to a wireless network and feed local clients over copper and **wireless**
- > Why?
 - Local devices does not have Wireless NIC
 - Wireless signal is not strong enough (repeater)
 - You have a Chromecast and want to use it in a hotel
 - You want to connect your tablet, mobile and laptop to an in-flight internet






How to Solve?

Back to Back

- > Pros:
 - Simple, Easy, Straight forward
- > Cons:
 - More devices (i.e. 2)
 - Not for travel
 - Not portable
 - Need cable

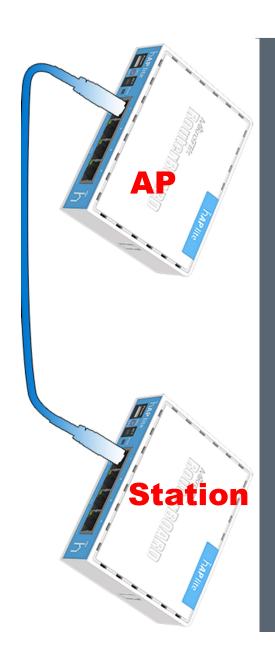



How to Solve?

Dual band: a routerboard

> Pros

- A professional solution
- Simple working solution.

> Cons

- No ready to use product (*)
- Expensive: RB922UAGS-5HPacD (99USD)+ R52HnD (59USD)+ enclosure (15USD) + Power...
- Need professional/costly device(s)
 - > Price? hAP ac lite*(49.95USD), hAP ac (129 USD)
- 2 different bands







And the Magic!



From RouterOS v6.35rc

- > Introduced in March 2016
- "wireless-rep" package
 - Now integrated in default Wireless Package
- added support
 for wireless *repeater* mode for 802.11 protocol
- Having Station and AP mode simultaneously on a single WLAN

mAP lite

> Introduced January 2016






The Magic in the Reality!





Announcement of 6.35rc

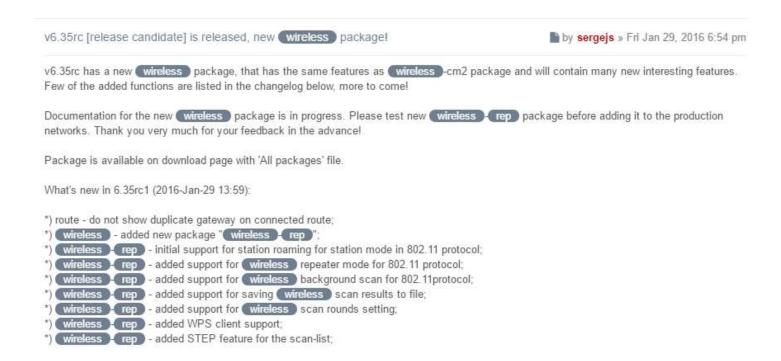



Alternative RouterBoards

- > Small
- > USB jack for power cord
 - Use with powerpack
- > But any other RouterBoard would work







hAP lite Classic



Other Accessories

- > Battery, 16000mAh aliexpress 25USD
 - http://www.aliexpress.com/store/product/10 0-Original-Xiaomi-Power-Bank-16000mAh-Xiaomi-External-Battery-Pack-With-Dual-USB-For-iPhone-6/1761705_32368495624.html
- 20-30 cm Micro USB Cable aliexpress 1USD (or longer)
- > 0.5 M Network Cable (good to have)







How to?

> schematic

Interface type: Virtual AP Interface name: wlan-client

Mode: station (*)
Upstream WiFi:
"training_w2w"
WPA2: 1122334455

IP: DHCP Client

NAT: scrcnat, outgoing int: wlan-client,

masgrd

MikroTik

Interface type: **physical** Interface name: wlan-ap

Mode: ap-bridge

SSID:myap-g[GROUPNUMER]

i.e. myap-g1 WPA2: 99887766



IP: 172.17.[groupnumber].1/24 i.e. 172.17.1.1/24

DHCP Server:

pool: 172.17.[G].2-172.17.[G].254



How to?

Preparation:

- Latest version of winbox (as of today 3.18)
- > Update to the latest version of RouterOS (as of today **6.44.3** [anything above 6.35.1])
- > Download extra packages install "wireless-rep"
- > Set the physical WLAN in "ap bridge" with your own wireless security profile
- > Setup IP and DHCP Server
- > Add a "Virtual" WLAN and set its mode to "station"
- > Add DHCP Client for Virtual WLAN Interface
- > Add Masquerade NAT



How to? (continue)

- > Connect your device to the MikroTik wireless network
- Connect to MikroTik (Winbox, SSH, telnet, IOS/Android APP)
- > Use a WiFi Analyzer to find channel of the public wifi
 - Or Background SCAN by mikrotik
- Change channel of the physical wlan to match the Upstream AP
- > Put SSID of the Upstream WiFi in the Virtual AP
 - Wait for connecting
- > Hooray! You are there!



Good to Have Tools

- > Wifi Analyzer for Android
 - https://play.google.com/store/apps/deta ils?id=com.farproc.wifi.analyzer&hl=en
- > Fing for android
 - https://play.google.com/store/apps/deta ils?id=com.overlook.android.fing&hl=en
- > Xirrus WiFi inspector (windows)
 - http://wvw.xirrus.com/wifi-inspector
- > iNetTools for iOS
- > IT Tools for iOS














Use latest Winbox!

- > Always use update Winbox to latest version before touching your RouterBoard!
- > http://www.mikrotik.com/download

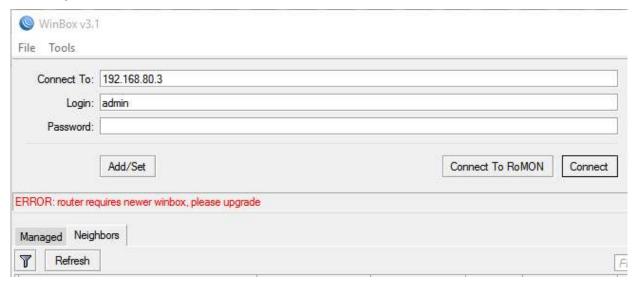






1.1 Check Version

- > [admin@MikroTik] > system package print
- > Flags: X disabled

| > | # | NAME | VERSION |
|---|-----|----------------|---------|
| > | 0 | routeros-smips | 6.29.1 |
| > | 1 | system | 6.29.1 |
| > | 2 X | ipv6 | 6.29.1 |
| > | 3 | wireless-cm2 | 6.29.1 |
| > | 4 | hotspot | 6.29.1 |
| > | 5 | dhcp | 6.29.1 |
| > | 6 | mpls | 6.29.1 |
| > | 7 | routing | 6.29.1 |
| > | 8 | ppp | 6.29.1 |
| > | 9 | security | 6.29.1 |
| > | 10 | advanced-tools | 6.29.1 |

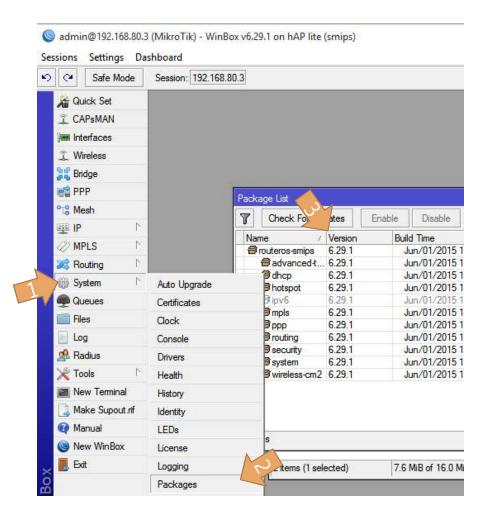



Upgrade

> Check Update

[admin@MikroTik] > system package update check-for-updates


current-version: 6.43.12 latest-version: 6.44.1

> Upgrade

[admin@MikroTik] > system package update upgrade

current-version: 6.43.12 latest-version: 6.44.1


status: Downloaded 56% (3.9MiB)

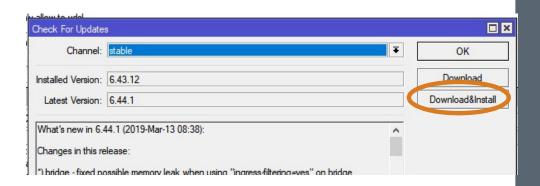



4.1 Setup AP


- > Setup Security profile
 - Wireless->Security Profiles->add
 - Name: profile-ap
 - Mode: dynamic keys
 - Authentication type: WPA2 PSK
 - Unicast and group Ciphers: aesc cm
 - WPA2 Pre-Shared Key 99887766

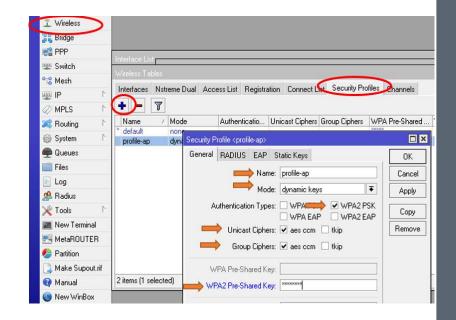



4.2 Setup AP


- > Wireless->
 - Mode: ap bridge
 - Frequency: leave it now
 - SSID: myap-g[GROUPID]
 - i.e. if you are group no 1, then set myap-g1
 - Security Profile: profile-ap (as configured in the previous section)
 - Apply
 - Enable

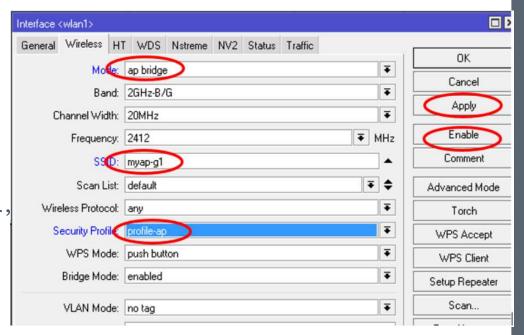



4.3 Setup IP address for AP


- > IP->Addresses->Add
 - Address: 172.17.[GROUPID].1/24
 - > i.e. if your Group no is 1, then put 172.17.1.1/24
 - Interface: wlan1-ap

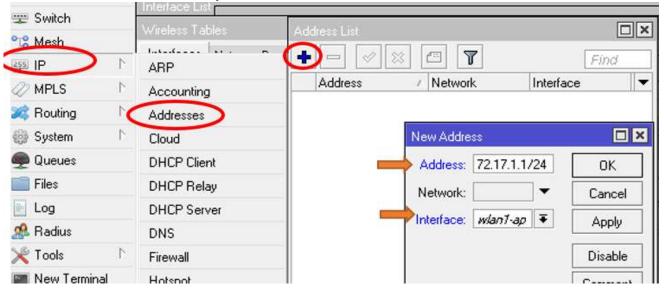



4.4 Setup DHCP Server for AP

- > IP->DHCP Server->DHCP Setup
- > DHCP Server Interface: wlan1-ap ->next
- > DHCP Address Space: 172.17.[GROUPID].0/24 ->next
 - i.e. if your group no is 1, then put 172.17.1.0/24

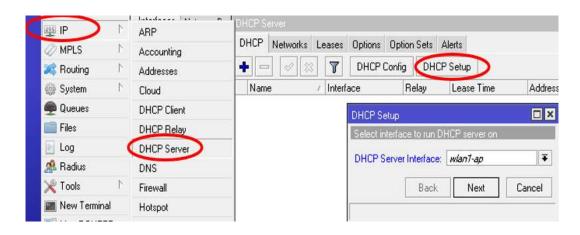



4.5 Verify AP

> What IP has your mobile received?






5 Connect the router to Upstream WiFi

- > 5.2 Find Frequency of the upstream WiFi
 - Xirrus wifi Inspector
 - WiFi Analyzer
- > 5.2 Find Frequency of the upstream WiFi MikroTik Way
 - Background SCAN

- If you do regular scan, you will loose your connectivity to

RouterBoard

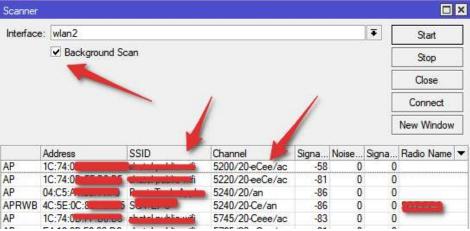



5 Connect the router to Upstream WiFi

- > 5.3 Change the Physical Interface frequency/band/CHW
 - Wireless->Interfaces->wlan1-ap->wirless->Frequency
- > 5.4 Create Security Profile if Upstream WiFi has any
- > 5.4 Wireless->Security Profiles->add
 - Name: profile-client
 - Mode: dynamic keys
 - Authentication type: WPA2 PSK
 - Unicast and group Ciphers: aesc cm
 - WPA2 Pre-Shared Key 1122334455



5.5 Create Virtual Wireless


> General->Name: wlan2-client


> Wireless->Mode: station

> Wireless->SSID: Upstream WiFi SSID

> Wireless->Security profile: profile-client (as created

before)

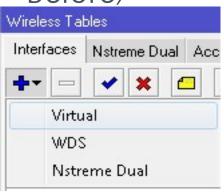


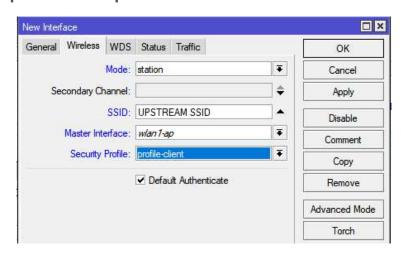



5.7 Setup DHCP Client


> IP->DHCP Client->add->DHCP: interface=wlan2-client

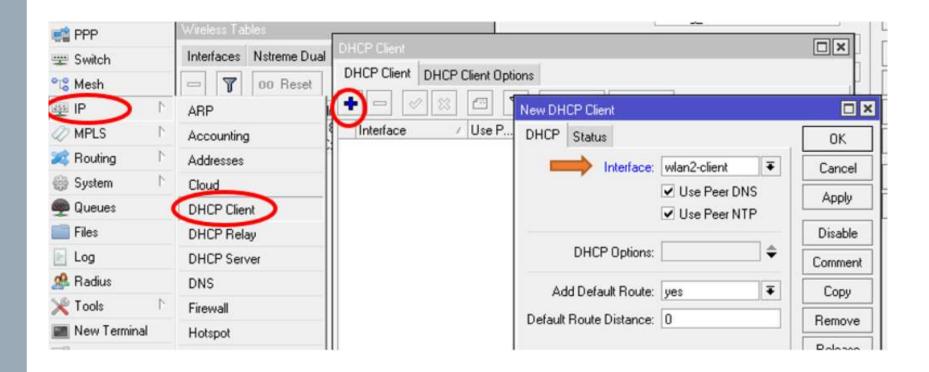



5.9 Setup NAT

- > IP->Firewall->NAT->add
 - General-> Chan: srcnat
 - General-> Out. Interface: wlan-client
 - Action-> Action: masquerade

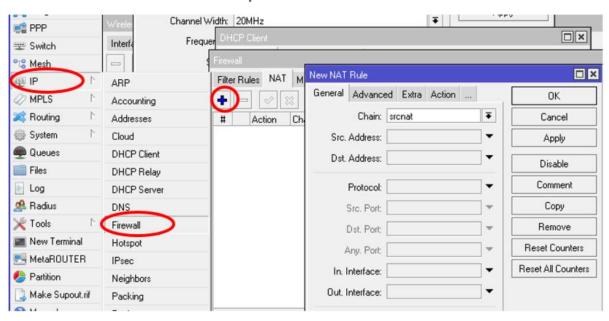



Which WLAN interface as AP/Station?

- > The setup could be done in 2 different ways:
- > Physical interface: AP, virtual interface: Station
 - You can easily connect to the RB, but you would get disconnected when you want to connect the RB to the upstream WiFi due to channel change
- > Physical interface: Station, virtual interface: AP
 - RB trying to search and find suitable upstream WiFi to connect to
 - Changing the channels
 - Most probably you can not connect to the RB without the RB gets connected to the upstream WiFi



Funny things to do

- > Turn your mobile cellular into an uplink for redundancy
- > Create a Hotspot and resell! (Don't do that!)
- > Turn it into an appliance by developing some script and webpages
 - Scan all channels. Store results. Change into default channel, wait for client. Show client available network. Select network, change channel, start!



Question?



Extra

- > hAP lite ac
- > Have station as physical interface